Methodist Presentation Theater Startup

To Start System & Power On Projector

Press the green "ON" button to power on projector





Use the mouse and keyboard to log-in to the computer.

*User: cpo-guest Password: COnference_Tigers *0 is a zero

> Touch center of monitor to show video source full screen. Touch again, to reduce image.

 
Connect the PC Computer or Use HDMI Cable

Select The Source:

 Press the "Desktop PC" button for the built-in computer.



- Press the "Lectern Laptop" button for your laptop / device.
 (Connect HDMI cable) WiFi: um-guest NO Password Required
- Press large black button to send source to projector system.



• Adjust volume by selecting source. Press Vol- or Vol+ or Mute





To Shut Down

• Press red button "OFF".





• Confirm shut down by pressing "Yes, Shut Down" in the pop-up window.

Trouble Shooting Tips

No Video on Screen

- Check projector is powered on.
- Check the selected source on the panel. Example: "Desktop PC".
- Press black button to send source to projector.
- Check cable connections at PC and Wall Plate.
- Check display settings on computer in use. Right click on desktop and select Display Settings. Look under Multiple Displays. Choose "duplicate these displays".

No Computer Audio

- If using a laptop, check audio setting at bottom right of desktop display. Adjust slider volume level and un-mute. Also check the audio output source is selected to "Crestron" when using an HDMI cable.
- If playing a You Tube video, check audio adjustment at bottom left of video. Un-mute and adjust slider.

Utilizing Teams and Zoom

Methodist Presentation Theater

 Log into the Desktop PC to launch Teams or Zoom. This will let you utilize the video camera and ceiling microphone.

To Select the Correct Camera

Settings > Video > Camera >
 "RoboSHOT USB"



To Select the Correct Speaker

- Settings > Audio > Speaker >
 - "Crestron (AMD High Definition Audio Device)"

To Select the Correct Microphone

Settings > Audio > Microphone >
 "Microphone - USB Audio"



To Control the Web Camera

- Camera controls are made using the remote control.
- The remote is stored in the side drawer of the podium
- Use arrow keys to move camera direction.
- Use Zoom +/- key to change focal length.

No Audio in Zoom

• Select the button "Control the volume of the selected source"





o Adjust volume using the Vol- or Vol+ buttons.



• Check correct speaker is selected in Teams / Zoom audio settings. Ex. "Crestron (AMD High Definition Audio Device)"

Utilizing Clickshare

Methodist Presentation Theater



Press "Wireless Presenter" button top right in Source Select.



Follow instructions on screen.



Connect laptop using the Barco USB dongle

